

# PROSMOKE

e-cigarette

## PROSMOKE USER MANUAL

Please read this user manual before using your product. It contains valuable instructions and tips to get the most out of your ProSmoke .

### Manual Contents

Safety Information  
Product Components  
Getting Started  
Instructions for Use

If at any time you have additional questions or wish to see extra tips and trips, please go to [www.ProSmokeStore.com](http://www.ProSmokeStore.com) and check the online manual.

2

### Safety Information

Please read through the following information carefully for safe and effective use of the ProSmoke and its supporting accessories.

#### Use of electronic cigarette

Do not use your ProSmoke until the blank cartridge has been removed and replaced and your batteries have been fully charged. After this, your unit is in standby until you inhale on the unit. This will engage the battery and start the vaporization process. After you are done inhaling, the unit automatically returns to its standby state.

3

### Use of the charger

Please screw the dedicated lithium battery into ProSmoke's dedicated charger. Charger can work normally with an AC100V-240V 50/60Hz voltage.

To reduce the risk of electric shock, charger should be unplugged from its power source before cleaning it. Charger is not to be used outdoors or in a damp environment.

### Precautions for Pocket carrying

If you are carrying the ProSmoke with you, we recommend using the portable carrying case offered on the website. Extreme caution should be used when carrying without the case due to the units ability to engage by having any airflow pushed through the unit. Things such as walking and moving in your pocket could cause the unit to engage and heat when next to your body.

4

**Warning: Nicotine is highly addictive. This product is not intended to diagnose, treat, cure, or mitigate any disease or condition. You must be over the age of 18 to buy and/or use this product with a nicotine option. If you have a demonstrated allergy or sensitivity to nicotine or any combination of inhalants, if you are pregnant or breast feeding, or if you have heart disease, diabetes, high blood pressure, asthma, consult your physician before using this product.**

5

## Getting Started With Your ProSmoke




6

## ProSmoke Components

### 1. Structure of the body

The design of the ProSmoke has three major components. The lithium ion battery with LED tip, the atomizer, and the flavor cartridge.

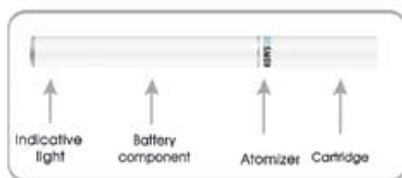

7

### 2. The Cartridge

The cartridge of ProSmoke contains the liquid that is vaporized by the atomizer to create vapor. The ProSmoke is shipped with a blank cartridge attached to the atomizer. It must be removed and replaced with a fresh cartridge before using the unit. When the cartridge has been used up, the vapor amount will start to reduce significantly and is time to be replaced with a new cartridge.

### 3. Battery

The ProSmoke contains high-performance lithium ion batteries that are environmentally safe and contain a micro-chip, exclusive to the ProSmoke. Other chargers or battery modifications are not to be used with this product.

8

### 4. Charger

The charger can be used in two ways. With the Wall portion and the USB cable together OR the USB portion only.

Whether using the wall or USB portion, the charging process remains the same. The LED on the wall charger will remain red at all points. The LED on the USB portion will be GREEN when plugged in and change to RED once the battery is screwed in. The battery will also initially blink to indicate it is connected. Once the unit is fully charged, the LED on the USB portion will change from RED to GREEN.

9



10

## How to start using your ProSmoke

Step 1: Open the package containing the new cartridge from the starter kit.  
Step 2: Remove the cartridge and remove the sealed cap from the unit.  
Step 3: Remove the old cartridge from the unit by pulling it off gently from the atomizer. Replace with the new cartridge and ensure it is pressed completely on to the unit. You may now throw away your old cartridge and move on to the next steps.



11

After the batteries are fully charged and a new cartridge is attached you can start to use your unit. When you inhale, the indicator light at the tip will light up simultaneously. Ceasing inhalation will terminate the atomization, and the operating mode will return to a standby state. It is recommended that the users store and use the ProSmoke horizontally to prevent any liquid from leaking out of the cartridge.

## Product Usage

### 1. Cartridge

- The ProSmoke cartridges are designed specifically for use with our products. They should be kept away from children and thrown away properly when you are finished using them.
- Stored in a dry environment at room temperature, the cartridge shelf life is 18 months.

12

### 2. Atomizer

- Never use the atomizer with no cartridge installed, it can significantly decrease the life of the atomizer.
- The atomizer is considered a consumable component and needs to be replaced periodically based on usage to get the most out of your ProSmoke.
- If using many different flavors, you can maximize your flavor experience by rinsing only the atomizer under lukewarm water and letting air dry for a few hours.

13

### 3. Battery

- We recommend a full 8 hour charge in each battery before initial use. Subsequent charges will only take about two hours.
- If the battery smells, burns, changes color, gets hot to the touch, or deforms in any way during re-charging or use, cut the power supply and remove the battery from the charger or remove battery from device, and discontinue using it.
- Do not attempt, in ANY way, to modify or damage the battery by piercing or opening the battery with any tool.

14

#### **4. Charger**

- There are two pieces that compose of your charging hardware.
- The LED on the wall portion of the charger will remain red while plugged in.
- The LED on the USB portion will turn from green to red when the battery is screwed in. This indicates it is charging and will return to green when the unit is fully charged.